


Models MT3809G & MT3810G

2-5-3 How to Remove and Reinstall XP Housing Indicator Covers

**⚠ WARNING**

If it becomes necessary to service or remove the instrument from the system, power to the device is disconnected at the power supply.

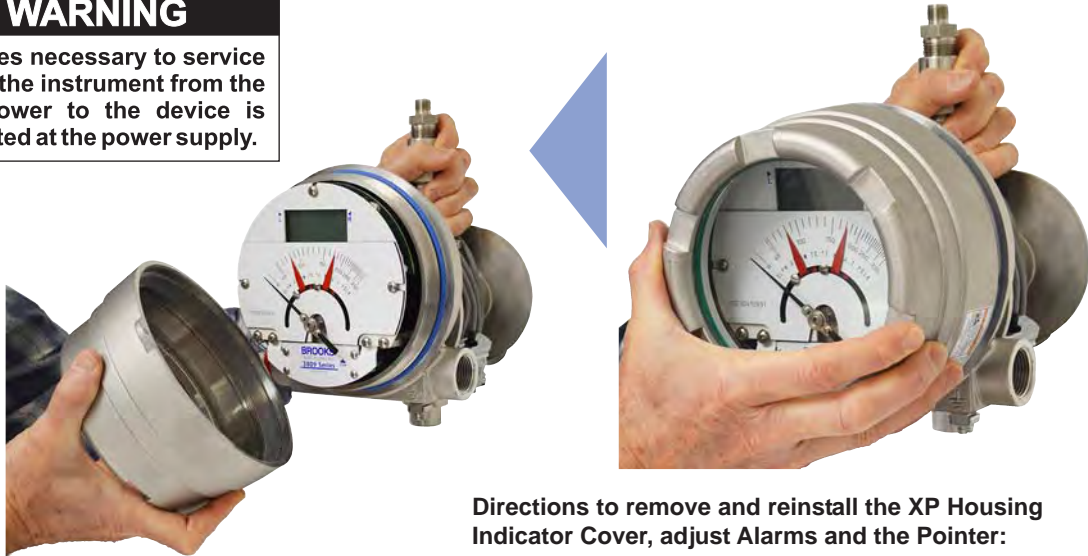

**Directions to remove and reinstall the XP Housing Indicator Cover, adjust Alarms and the Pointer:**

1. To begin make sure the float is at rest and there isn't flow going through the meter.
2. Using your hands or a strap wrench turn the cover counter clockwise to remove the cover from the housing
3. Remove the cover from the housing. The gasket should stay attached to the groove in the housing
4. Using a flat blade screwdriver with a 1/8" blade, hold the red alarm pointer and turn the screw counterclockwise to loosen the pointer, slide it to desired position on scale and tighten screw.
5. Using a flat blade screwdriver with a 1/8" blade, hold the pointer and turn the screw to align with the "R" on the scale. It may take a few adjustments to get the pointer aligned to the "R".
6. To replace the cover, place the cover against the housing and turn the cover clockwise. Note, it will take several rotations to tighten the cover and the cover must be in contact with the gasket to keep a watertight seal.

